



### **Information about the machine**

*Machine type:* **AUTOMATIC ROLL-PACK MACHINE  
FOR MATTRESSES**

*Model:* **BM183**

*Serial number:* **364**

*Anno di costruzione:* **2014**

### **Manufacturer**

#### **BRSIOMECCANICA s.r.l.**

Via Milano, 16 - 22079 Villa Guardia (Co)  
telefono +39.031.483377 - fax +39.031.481696  
e-mail: [info@brosiomeccanica.it](mailto:info@brosiomeccanica.it)  
sito internet: [www.brosiomeccanica.it](http://www.brosiomeccanica.it)

### **Information about the manual**

#### ***The manual for use and maintenance of the plant***

edition **01/07** revisione **00**

#### ***is composed by***

- ▶ **INTRODUCTION**
- ▶ **MANUAL FOR USE** of **13** chapters  
total number of pages ▶ 71 ◀

#### **Appendix**

- A - SPARE PARTS**
- B - WIRING DIAGRAM**
- C - COMPRESSED AIR VESSERLS**
- D - VACUUM GENERATOR**

***This manual has been compiled in compliance with the indication given in  
standard EN 292/2 p. 5***

***UNI 10653 documentazione tecnica di prodotto  
UNI 10893 Istruzioni per l'uso***

Compiled for BRSIOMECCANICA by

**eRReVierRe communication**

via F.lli Kennedy, 16 - 2206 NOVEDRATE (CO)  
telephone 335.5309195 - e-mail [errevierre@libero.it](mailto:errevierre@libero.it)



# INDEX

<b>1</b>	<b>INFORMATION ABOUT SAFETY</b>		
1.1	Introduction	pag	<b>1</b>
1.2	Particular recommendation for the operator	pag	<b>2</b>
<b>2</b>	<b>CONTROLS AND IDENTIFICATION</b>		
2.1	Packing and shipment	pag	<b>5</b>
2.2	Machine identification	pag	<b>6</b>
	■ <i>picture 1</i> IDENTIFICATION PLATE	pag	6
2.3	Checking on arrival	pag	<b>7</b>
<b>3</b>	<b>TECHNICAL FEATURES</b>		
3.1	Technical features	pag	<b>8</b>
	● DRAWING 1 left side	pag	9
	● DRAWING 2 front view	pag	9
	● DRAWING 3 top view	pag	10
	● DRAWING 4 minimum area required for installation	pag	11
<b>4</b>	<b>GENERAL DESCRIPTION</b>		
4.1	Correct use of the machine	pag	<b>12</b>
4.2	Components of the machine	pag	<b>12</b>
	■ <i>picture 2</i> COMPONENTS	pag	13
<b>5</b>	<b>SAFETY GUARDS AND SAFETY DEVICES</b>		
5.1	Introduction	pag	<b>15</b>
5.2	Safety device	pag	<b>15</b>
5.3	Safety guards and safety devices	pag	<b>15</b>
	■ <i>picture 3</i> SAFETY GUARDS AND SAFETY DEVICES	pag	16
5.4	Safety labels	pag	<b>16</b>
	■ <i>picture 4</i> SAFETY LABELS	pag	17
<b>6</b>	<b>INSTALLATION</b>		
6.1	Introduction	pag	<b>18</b>
	■ <i>picture 5</i> PARTS OF THE MACHINE	pag	18
6.2	Machine lifting	pag	<b>19</b>
	● DRAWING 5 main structure lifting	pag	19
	● DRAWING 6 entrance rolls-conveyor or motorised conveyour lifting	pag	20
	● DRAWING 7 exit motorie-carpet lifting	pag	20
6.3	Positioning and levelling	pag	<b>21</b>
	● DRAWING 8 levelling	pag	21
6.4	Rolls-conveyors/motorised-carpet conveyors positioning	pag	<b>21</b>
	● DRAWING 9 positioning	pag	22
<b>7</b>	<b>CONNECTION</b>		
7.1	Introduction	pag	<b>23</b>
7.2	Electrical connection	pag	<b>23</b>
	7.2.1 - Motorised-carpet electrical connection	pag	23
	■ <i>picture 6</i> MOTORISED-CARPET ELECTRICAL CONNECTION	pag	24
	7.2.2 - Machine electrical connection	pag	24
	■ <i>picture 7</i> MAIN SWITCH	pag	24
	■ <i>picture 8</i> ELECTRICAL CONNECTION	pag	25
7.3	Pneumatic connection	pag	<b>25</b>
	■ <i>picture 9</i> PNEUMATIC CONNECTION	pag	25
	7.3.1 - Filter-regulator group	pag	26
	■ <i>picture 10</i> FILTER REGULATOR GROUP	pag	26
	7.3.2 - Electrovalves group	pag	27
	■ <i>picture 11</i> ELECTROVALVES GROUP	pag	27
	7.3.3 - Tank group	pag	27
7.4	Rotating joint	pag	<b>28</b>
	■ <i>picture 12</i> ROTATINE JOINT	pag	28
7.5	Vacuum generator	pag	<b>28</b>
	■ <i>picture 13</i> VACUUM GENERATOR	pag	28
<b>8</b>	<b>CONTROLS</b>		
8.1	Introduction	pag	<b>30</b>
	■ <i>picture 14</i> CONTROLS	pag	30
8.2	Controls	pag	<b>31</b>
	8.2.1 - Electric cabinet controls	pag	31
	● DRAWING 10 electric cabinet controls	pag	31
	◆ <b>TABLE 1</b> ELECTRIC CABINET CONTROLS DESCRIPTION	pag	31
	8.2.2 - Control panel controls	pag	32
	● DRAWING 11 control panel controls	pag	32
	◆ <b>TABLE 2</b> CONTROL PANEL CONTROLS DESCRIPTION	pag	32
	8.2.3 - Remote control panel controls	pag	34



	■ <b>picture 15</b>	REMOTE CONTROL PANEL CONTROLS	pag	34
	◆ <b>TABLE 3</b>	REMOTE CONTROL PANEL CONTROLS DESCRIPTION	pag	34
<b>9</b>	<b>WORKING MODES</b>			
<b>9.1</b>	Introduction		pag	<b>35</b>
	■ <b>picture 16</b>	KEY CONTROLS	pag	35
	9.1.1 - Plastic roll loading and feeding		pag	35
	■ <b>picture 17</b>	ROLLS LOADING	pag	36
	■ <b>picture 18</b>	ROLLS SECURING	pag	36
	■ <b>picture 19</b>	ROBOT HANDS	pag	37
	■ <b>picture 20</b>	PLASTIC FILM FEEDING	pag	37
<b>9.2</b>	Automatic mode		pag	<b>38</b>
	■ <b>picture 21</b>	AUTOMATIC MODE 1	pag	38
	■ <b>picture 22</b>	AUTOMATIC MODE 2	pag	39
	9.2.1 - Working cycle		pag	40
	■ <b>picture 23</b>	WORKING CYCLE 1	pag	40
	■ <b>picture 24</b>	WORKING CYCLE 2	pag	40
	■ <b>picture 25</b>	FEEDING PHASE 1	pag	41
	■ <b>picture 26</b>	FEEDING PHASE 2	pag	41
	■ <b>picture 27</b>	FEEDING PHASE 3	pag	42
	■ <b>picture 28</b>	WORKING CYCLE 3	pag	42
	■ <b>picture 29</b>	WORKING CYCLE 4	pag	43
	■ <b>picture 30</b>	WORKING CYCLE 5	pag	44
	■ <b>picture 31</b>	WORKING CYCLE 6	pag	44
<b>9.3</b>	Manual mode		pag	<b>45</b>
	■ <b>picture 32</b>	MANUAL MODE 1	pag	45
	■ <b>picture 33</b>	MANUAL MODE 2	pag	45
	■ <b>picture 34</b>	MANUAL MODE PAGE 2	pag	46
	■ <b>picture 35</b>	MANUAL MODE PAGE 3	pag	46
<b>10</b>	<b>CONFIGURATION</b>			
<b>10.1</b>	Program/recipe selection		pag	<b>47</b>
	■ <b>picture 36</b>	STOP CYCLE PAGE	pag	47
	■ <b>picture 37</b>	SELECT A RECIPE	pag	47
	■ <b>picture 38</b>	RECIPE NAME CHANGE	pag	48
<b>10.2</b>	New program/recipe		pag	<b>49</b>
	■ <b>picture 39</b>	SELECT A RECIPE	pag	49
	■ <b>picture 40</b>	EDIT RECIPE	pag	49
<b>10.3</b>	Program/recipe modification		pag	<b>50</b>
	■ <b>picture 41</b>	EDIT RECIPE	pag	50
	■ <b>picture 42</b>	RECIPE PARAMETERS 1	pag	50
	■ <b>picture 43</b>	ENTRANCE PHOTOCELL	pag	51
	■ <b>picture 44</b>	RECIPE PARAMETERS 2	pag	51
	■ <b>picture 45</b>	PROSSIMITY	pag	52
	■ <b>picture 46</b>	OPTIONAL PARAMETERS	pag	53
<b>10.4</b>	Technical parameters		pag	<b>54</b>
	■ <b>picture 47</b>	STOP CYCLE	pag	54
	■ <b>picture 48</b>	TECHNICAL PARAMETERS PASSWORD	pag	54
	10.4.1 - New password		pag	54
	■ <b>picture 49</b>	TECHNICAL PARAMETERS NEW PASSWORD	pag	55
	10.4.2 - Technical parameters modification		pag	55
	■ <b>picture 50</b>	TECHNICAL PARAMETERS PAGE 1	pag	55
	■ <b>picture 51</b>	TECHNICAL PARAMETERS PAGE 2	pag	56
	■ <b>picture 52</b>	TECHNICAL PARAMETERS PAGE 3	pag	57
<b>10.5</b>	Alarm		pag	<b>58</b>
	■ <b>picture 53</b>	ALARM	pag	58
	10.5.1 - Alarm reset		pag	58
	◆ <b>TABLE 4</b>	ALARM LIST	pag	58
<b>10.6</b>	Setting		pag	<b>59</b>
	10.6.1 - Mattress diameter		pag	59
	■ <b>picture 54</b>	EDIT RECIPE PAGE 2	pag	59
	■ <b>picture 55</b>	ELECTROPNEUMATIC REGULATOR	pag	59
	■ <b>picture 56</b>	PROXIMITY SWITCH	pag	60
	10.6.2 - Scotch-tape holding-bar		pag	61
	■ <b>picture 57</b>	SCOTCH-TAPE GUNS	pag	61
	■ <b>picture 58</b>	PRESSARE REGULATORS	pag	61
	■ <b>picture 59</b>	TECHNICAL PARAMETERS PAGE 2	pag	62
<b>11</b>	<b>OPERATOR'S POSITION</b>			
<b>11.1</b>	Introduction		pag	<b>63</b>
<b>11.2</b>	Operator's position during the working		pag	<b>63</b>
	11.2.1 - Operator's zone		pag	64
	◆ <b>TABLE 5</b>	OPERATOR'S ZONE	pag	64
	● <b>DRAWING 12</b>	operator's zone	pag	64
	11.2.2 - Dangerous zone		pag	65
	◆ <b>TABLE 6</b>	DANGEROUS ZONE	pag	65
	● <b>DRAWING 13</b>	dangerous	pag	65
	11.2.3 - Residual hazard zone		pag	66
	◆ <b>TABLE 7</b>	RESIDUAL HAZARD ZONE	pag	66
	● <b>DRAWING 14</b>	residual hazard zone	pag	66



